


Assembly guide for the DIY pallet furniture

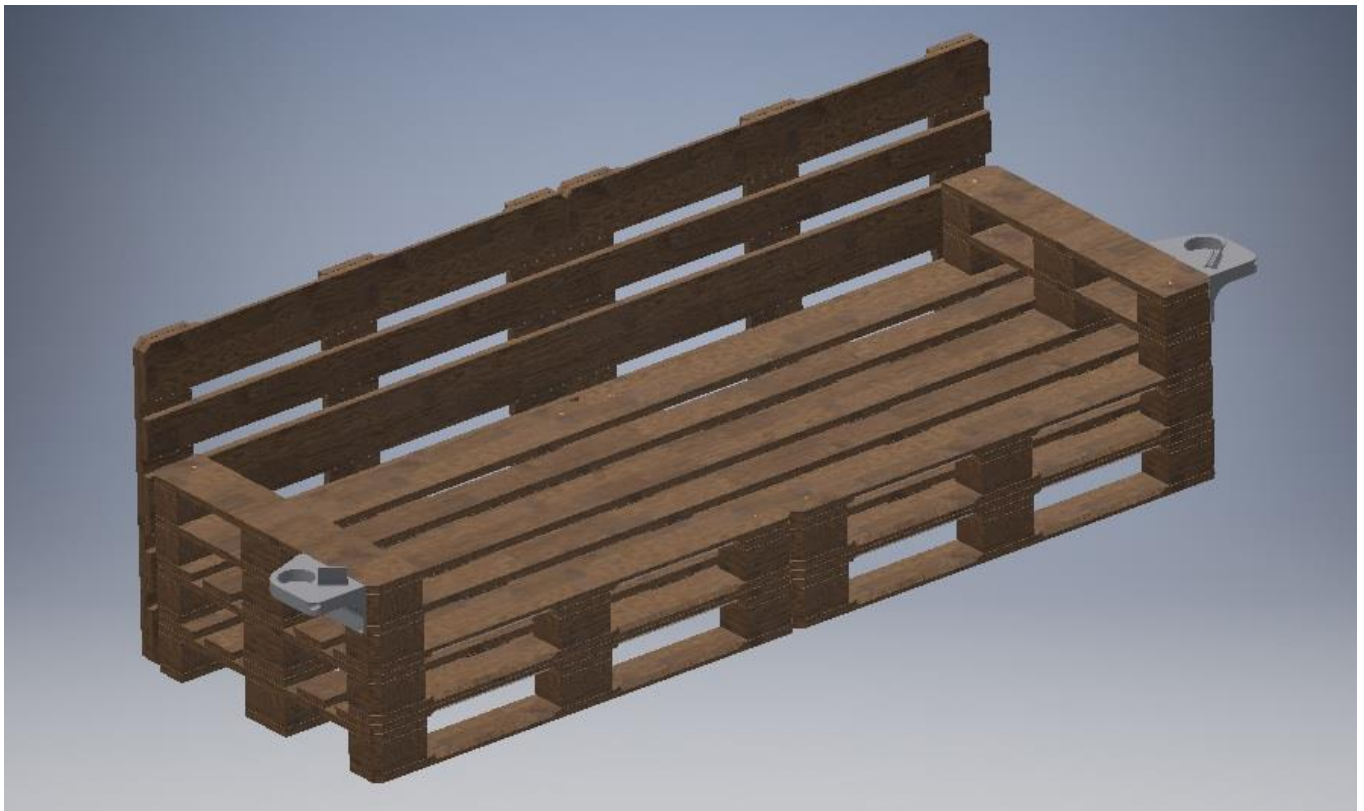


Follow the steps below:

- **For this project you will need:**


- 8 pieces of euro pallets (EPAL) (800x1200 mm)
- 20 pieces of 6x200 mm reisser screws
- 12 pieces of 6x80 mm reisser screws
- 8 pieces of 6x40 mm reisser screws
- 2 pieces (right and left) of 3d printed glass holder and phone stands

- **Step 1:** Remove the top and bottom planks from two pallets to make the armrests. (You will need the side pieces [the hatched ones])

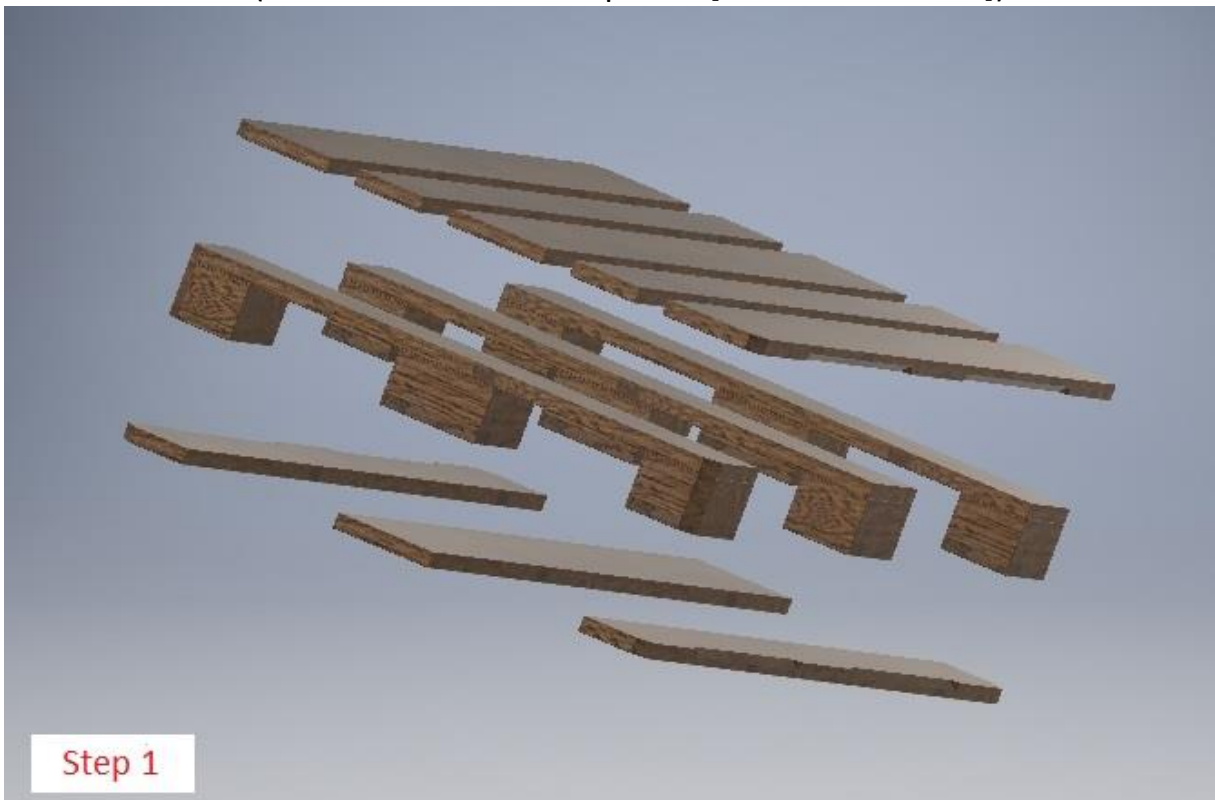


Step 1


- **Step 2:** Remove the bottom and middle pieces of two pallets to make the backrests.

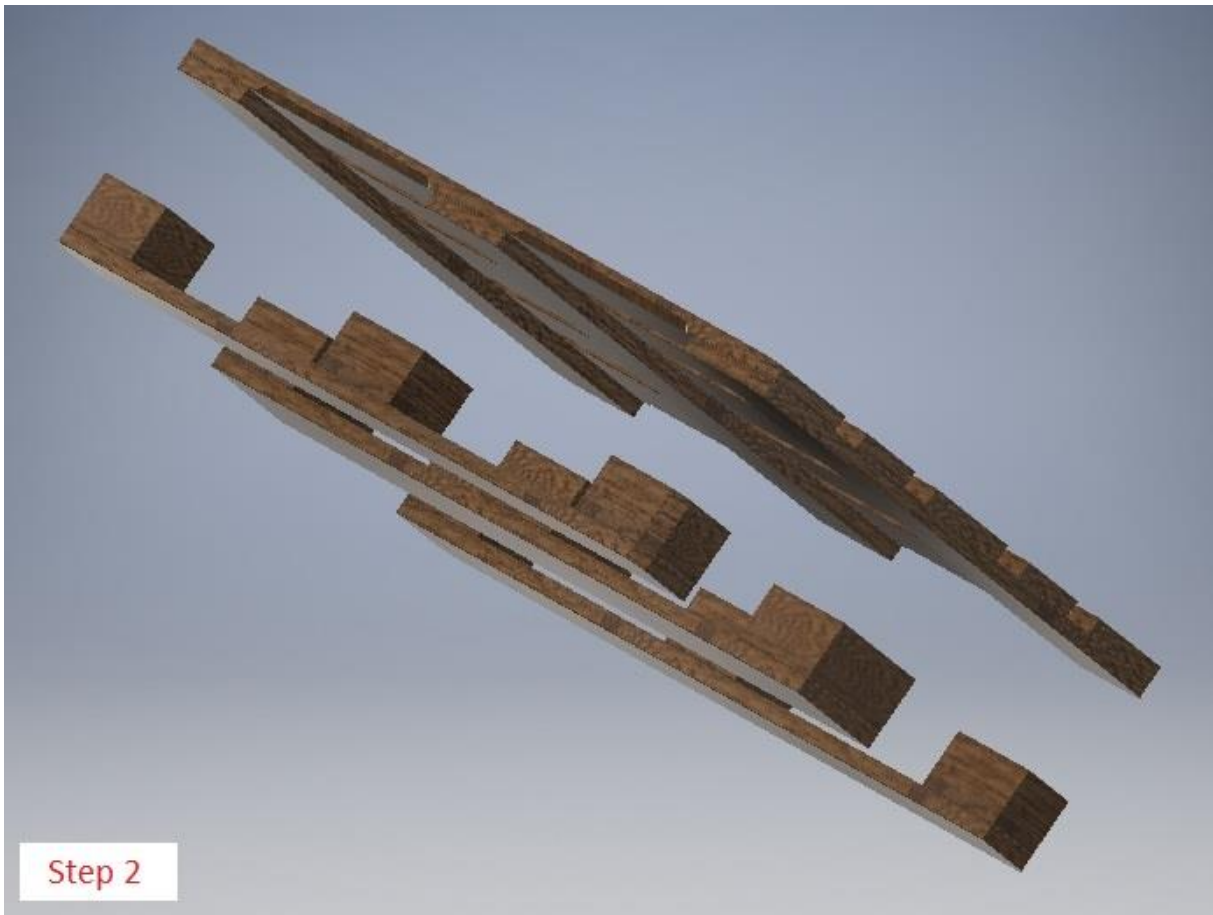

- **Step 3:** Fasten two pallets together with 4 pieces of 6x200 mm reisser screws, then repeat it with two other pallets to make the seats.

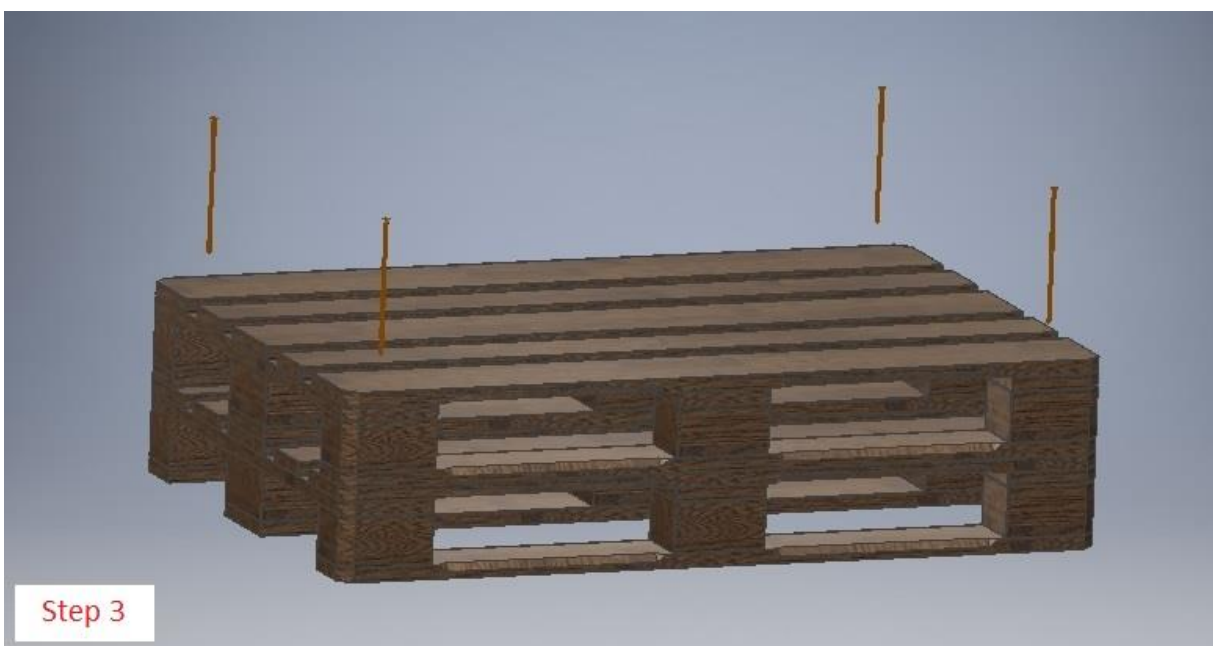

- **Step 4:** Fasten the two seats to each other with 4 pieces of 4x200 mm reisser screws.

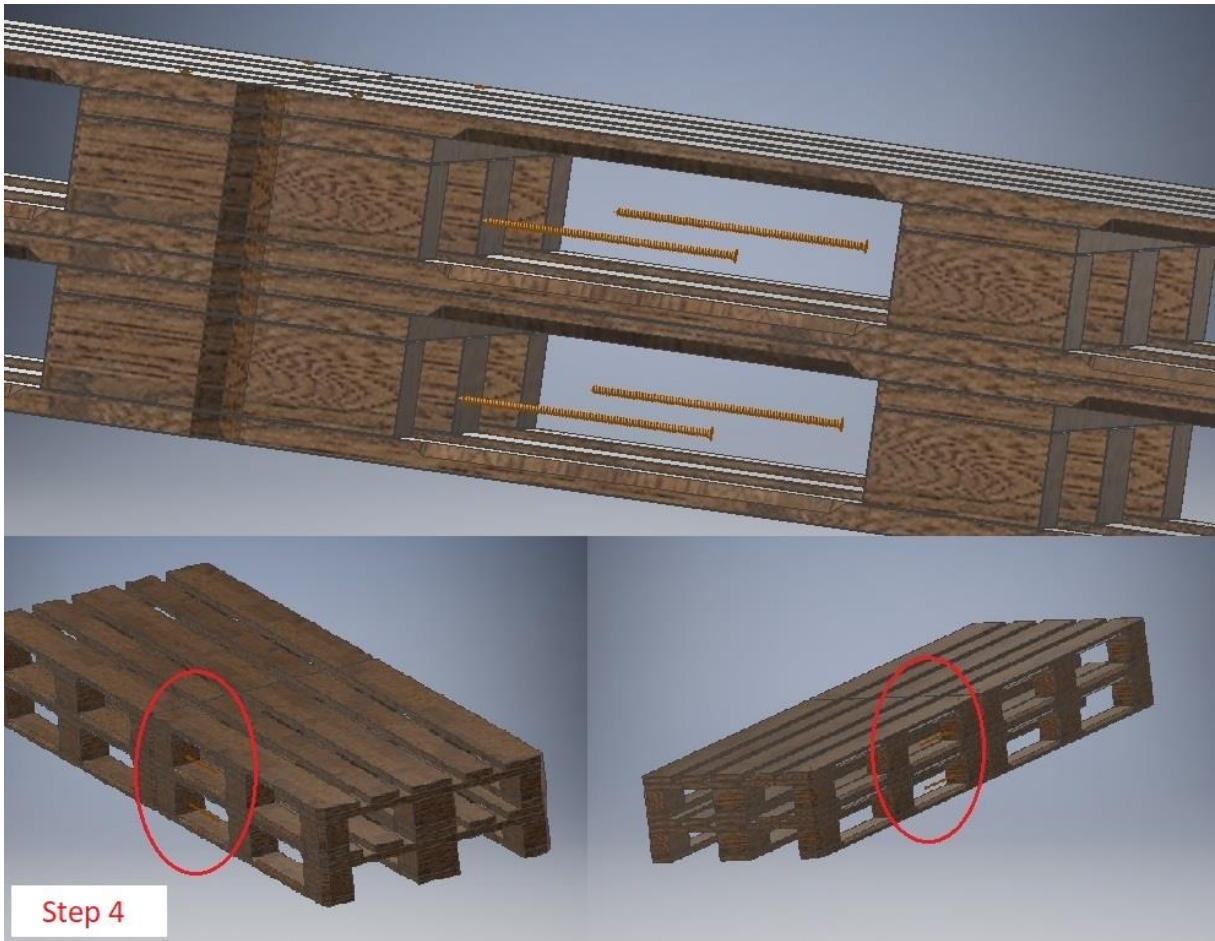


- **Step 5:** Fasten two armrests to the sides of the seats with 4 pieces of 4x200 mm reisser screws.



- **Step 6:** Fasten the last two armrests to the previous ones with 4 pieces of 4x200 mm reisser screws.



- **Step 7:** Fasten the backrests to the seats and armrests with 12 pieces of 6x80 mm reisser screws.

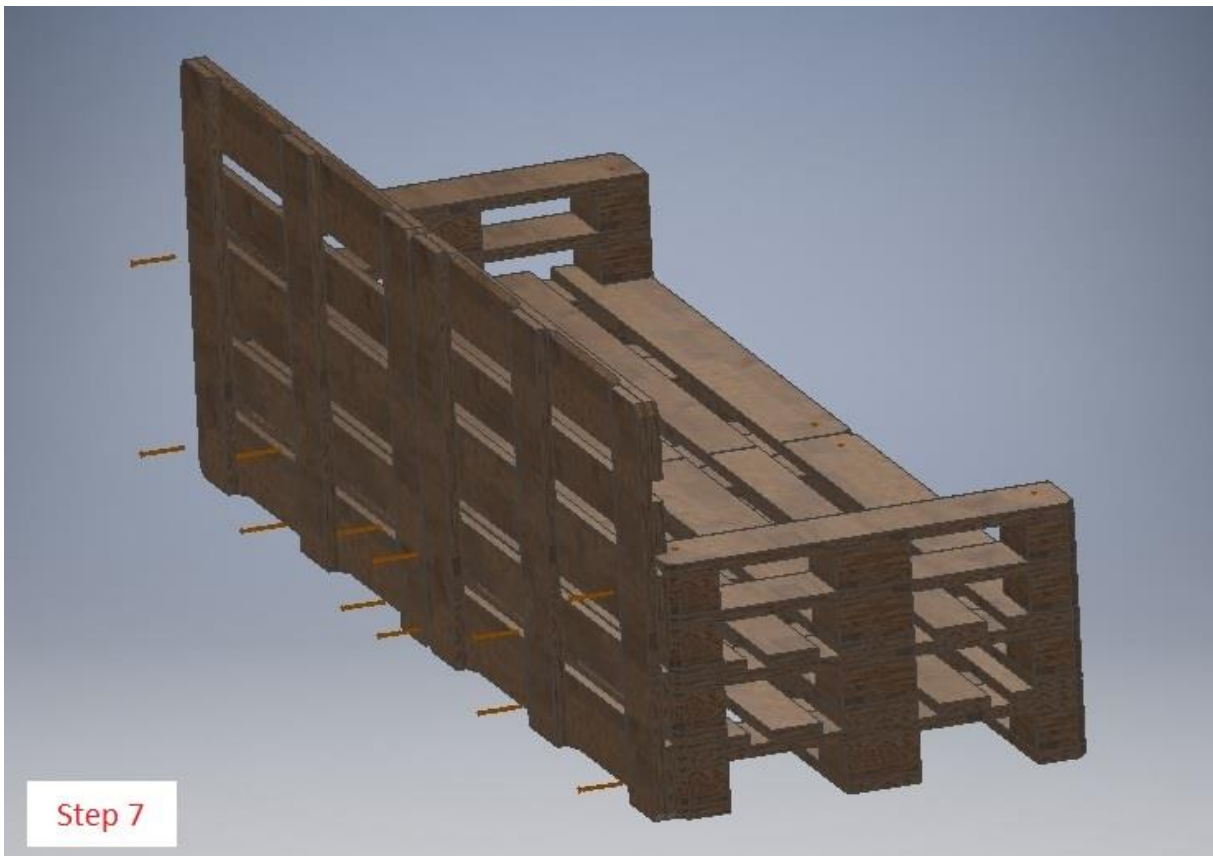

- **Step 8:** Fasten the 3d printed glass holder and phone stands to the sides of the armrests with 8 pieces of 6x40 mm reisser screws.

